


How to tell the exact configuration of the transceiver

(KG-639E, KG-833, KG-659E, KG-669E, KG-679E, KG-689E, KG-699E, KG-801E, KG-703E)

There are 3 configurations for the transceiver, the popular, the upgrade and the advanced. Meanwhile, there are C3 and C2 for the popular version.

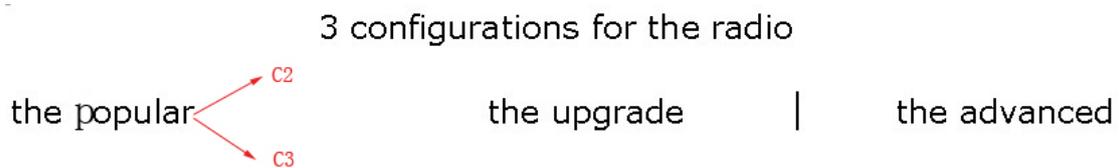


Please refer to below to tell the exact configuration of the transceiver:

1. Please check with the features of the configuration as below:

the feature	the popular	the upgrade	the advanced
Inspection, monitor, stun, kill and emergency alarm		√	
DCS/CTCSS of RX and TX can be set respectively	√	√	√
5 tones and 2 tones			√

2. Please check with the serial number of the sticker on the back of the radio body as below:

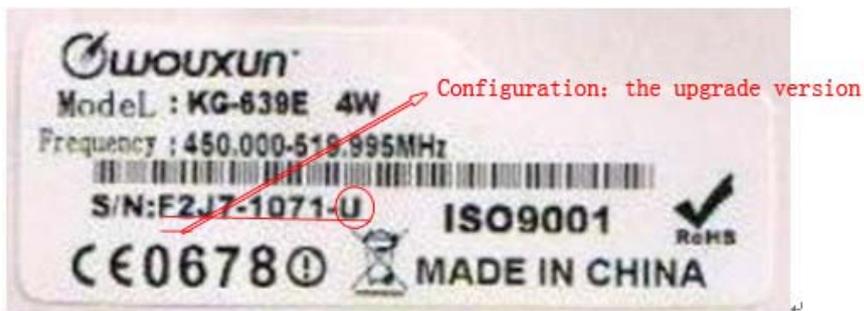

3. The programming software for C2 or C3 radios are different, the user should tell the right configuration before using the correct software to program.

➤ For the transceivers with keypad display, like KG-659E, KG-669E, KG-679E, KG-689E, KG-699E, KG-801E, KG-703E, there are 2 methods to tell C2 or C3 version as following:


- a. Please check with **MENE 5** to check the function:
 C2 transceiver is with scrambler optional function (**SCR**).
 C3 transceiver is Transmit Voice Prompt (**ROGER**), and without the

scrambler function.

- b. Please check with the menu list to check the total menu functions:
C2 transceiver is with 41 functions,
C3 transceiver is with 40 functions.
- *For the transceivers without keypad display, like KG-639E, KG-833, pls use the below method to tell as following:*
- a. C3 transceiver has the battery capacity prompt function. When powering on the transceiver, the right-hand receiving light flashes green 1-4 times to show the battery capacity(If the battery is almost empty, the receiving light flashes red. Pls refer to the related instruction for the battery capacity prompt function on the user's manual.)
 - b. C2 transceiver does not have this function. When powering on the transceiver, the LED lights flashes green once to prompt that the transceiver is powered on to operate.


4. The different LED lights flashes when transmitting/receiving.

- a. For the upgrade/advanced version transceivers, when pressing PTT to transmit, the right-hand LED light flashes RED to prompt the transceiver is transmitting, while receiving the signals, the left-hand LED light flashes GREEN to prompt the transceiver is receiving, please see the picture as below:

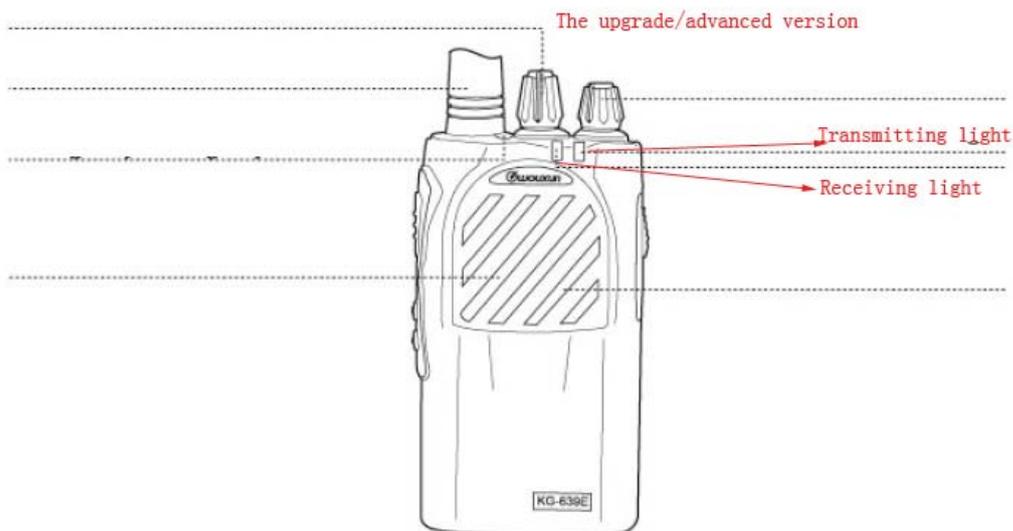

- b. For the C2 and C3 popular version transceivers, when pressing PTT to transmit, the left-hand LED light flashes RED to prompt the transceiver is

transmitting, while receiving the signals, the right-hand LED light flashes GREEN to prompt the transceiver is receiving, please see the picture as below:

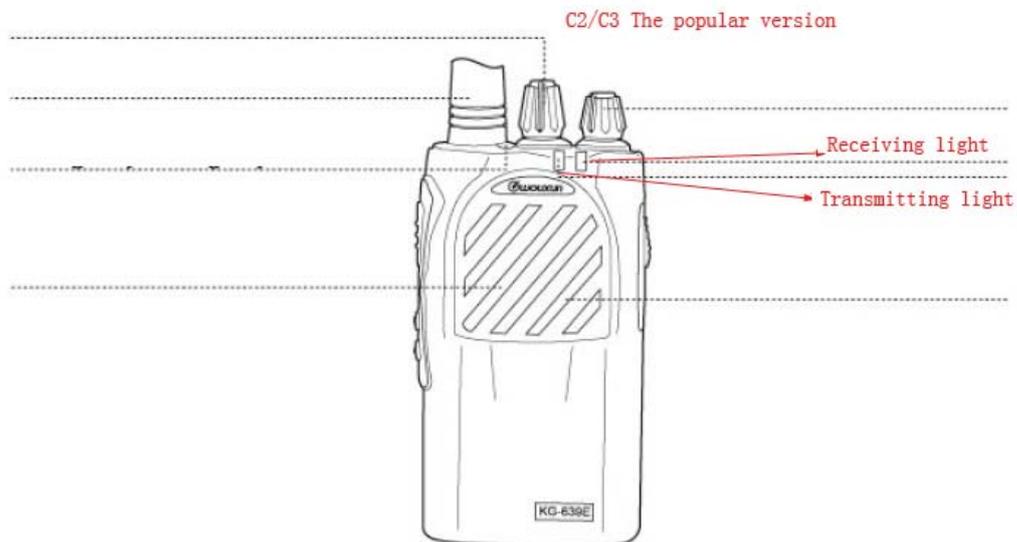

▼NOTE:

Please note that there may be some older popular version transceivers, the right-hand indicator light is for transmitting, and the left-hand indicator light is for receiving.

